

Wearable Terminal

- **WD200 - Replace Battery** -




Work Instruction

Version 1.0

How to replace the battery


1. Disassemble the back cover of WD200, the position of the screw is shown as below figure:

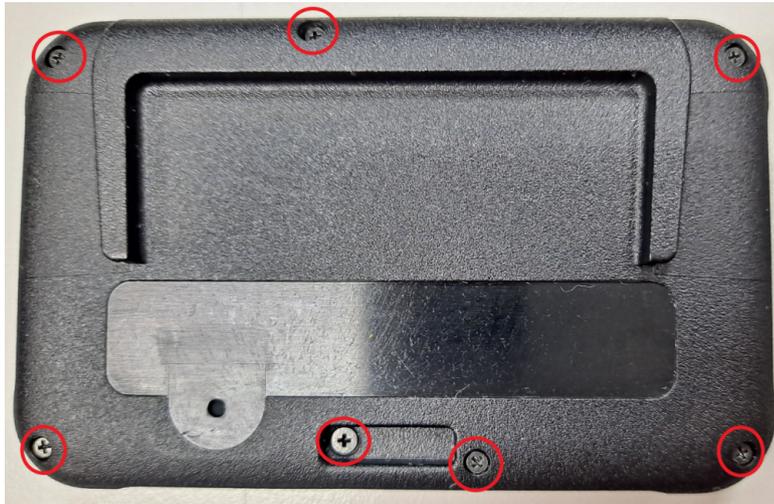


2. After disassembling the screws and remove the back cover.




3. There has a female connector on the battery FPC cable and a male connector on the mainboard as below shown, please be careful to remove the battery connector from the mainboard.

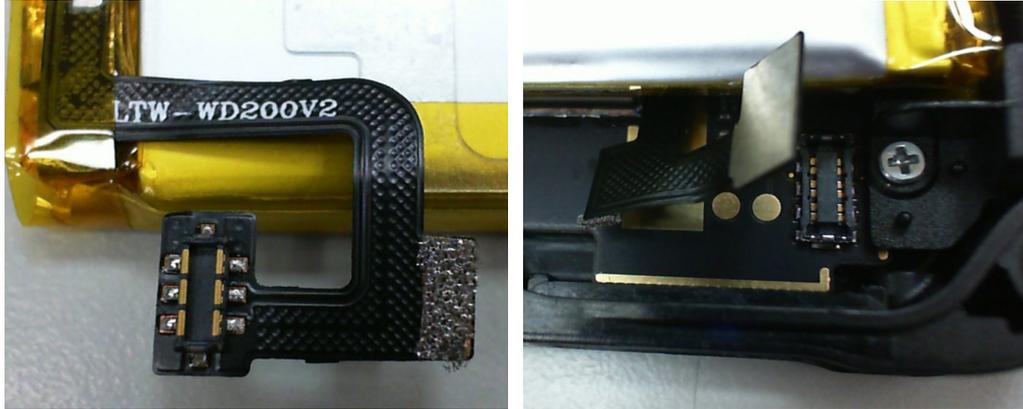

4. The battery was separated from WD200 as shown in the below figure:

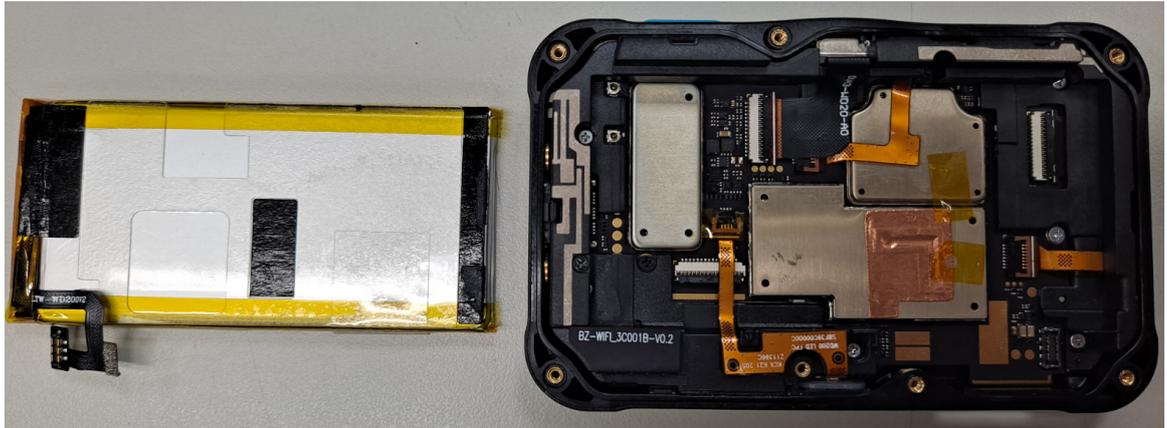


5. Please tear the battery release paper first as shown in the red rectangle in the below figure:

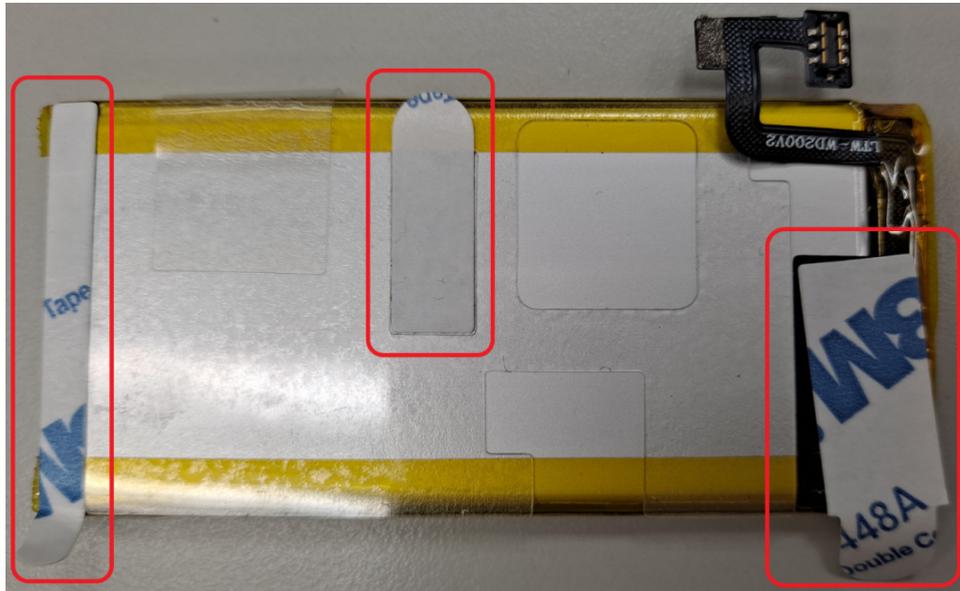

6. Put the battery to WD200 and the battery yellow part near the wall (red arrow) and connecting the connector together as shown in the figure.



- Put the back cover of WD200 and lock the screw is shown as below figure:

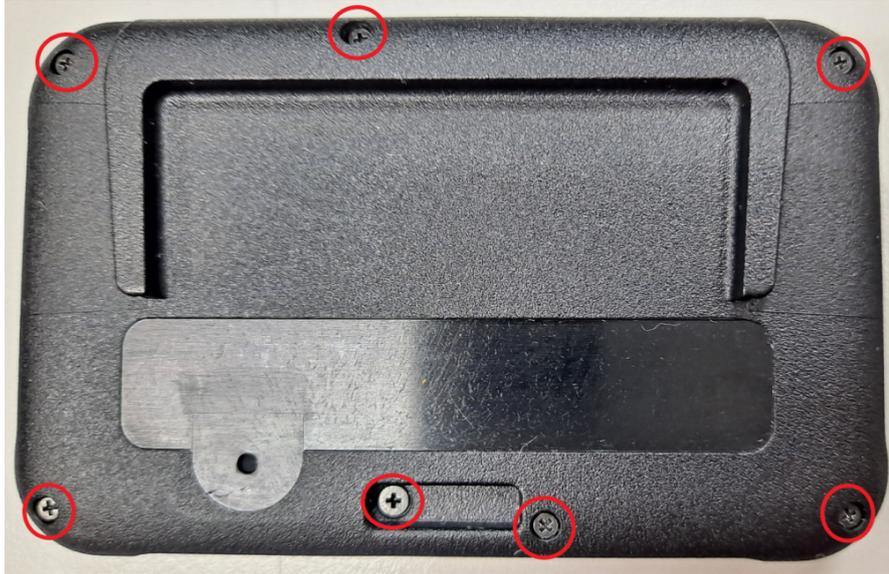

Key Part List

■ Battery

